GETTING STARTED

PHT Nozzle Assessment System

From printhead testing to objective nozzle analysis and scoring.

Follow these steps to register, set up your DST scanner, analyze nozzle-test results, and document printhead condition.

Before you begin

01
Print Head Tester
Produce the printed nozzle test.

02
Windows computer
Install the scanner application.

03
DST scanner
Use the scanner provided by DST.

01 Create your account

Visit **app.printheadtester.com**, select **Create an account**, and complete your registration.

CREATE AN ACCOUNT >

SCAN TO START

02 Wait for DST account approval

DST must approve your account. You will receive a **confirmation email** once your registration is approved. Then you can sign in.

03 Install the Windows scanner app

In your **account approval email**, you will receive a link to download the **Windows scanner app installer**. Install the app and complete scanner setup. **Use only the web portal for scanning.**

IMPORTANT **Do not install software from CDs supplied with the scanner.**

04 Prepare the printed nozzle test

Use the **Print Head Tester (PHT)** to produce a physical nozzle test. Make sure the printed pattern is clean and clearly visible.

SCAN / ANALYZE / REPORT

05 Scan the nozzle test

Place the **printed nozzle test face down** on the scanner. Open the **web portal** and press **Scan**, either on the physical scanner or in the web portal.

06 Review nozzle analysis and scoring


Review individual nozzle results, the overall **printhead health score**, and **Pass/Fail** results. The **Pass/Fail threshold** can be configured in **Settings**.

07 Generate reports and compare results

Use **Individual Printhead Reports** and **Printhead Group Reports** to compare results before and after cleaning or recovery.

Assessment dashboard

PHT Nozzle Assessment System

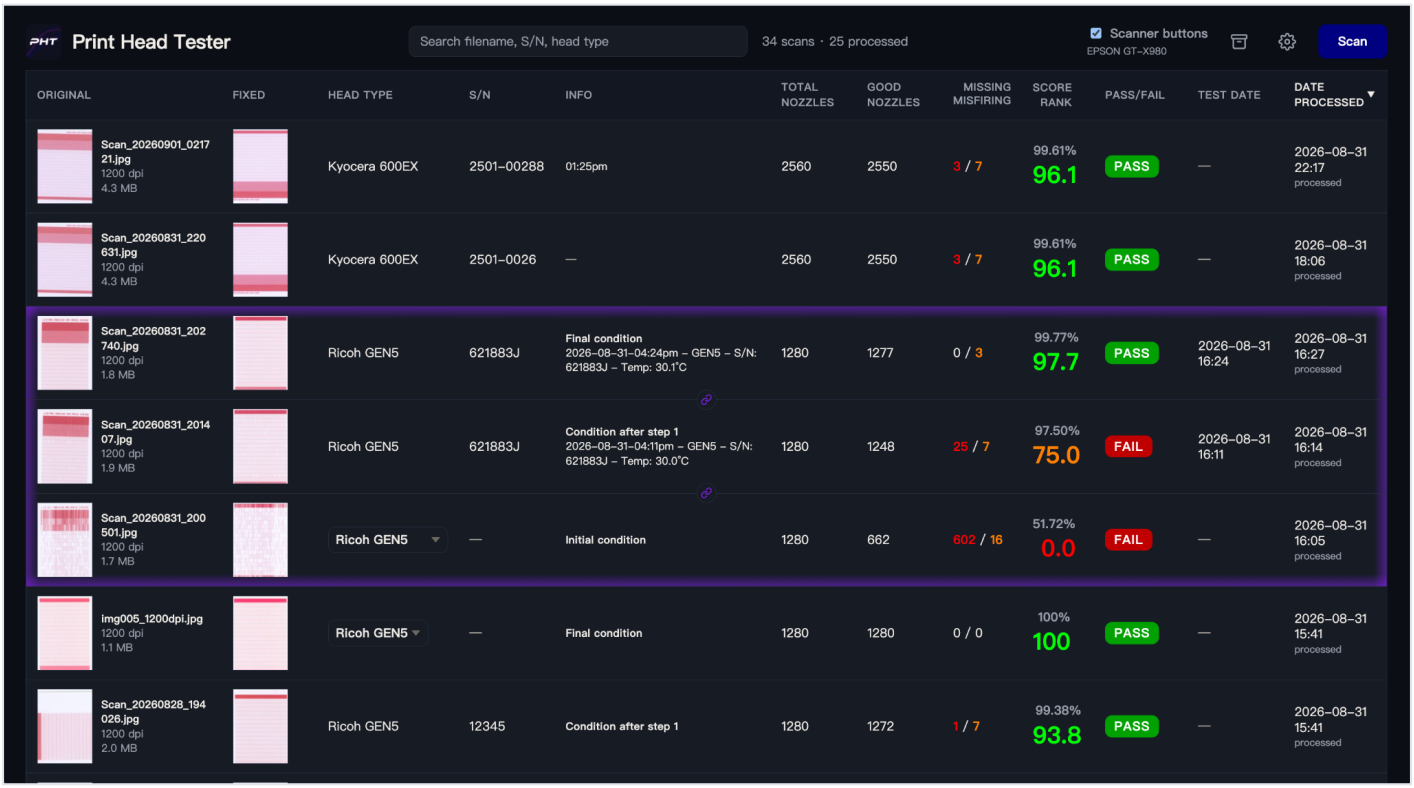

Need assistance?

Phone/WhatsApp: +1-905-782-6274

Email: support@digitalsigntech.net

OPEN ACCOUNT PORTAL >